



How to use the SPEED KING electric knife

- 1 Plug the clean knife into 240V AC. The knife should be left to warm up.
- 2 Use the knife to remove the capping on the frame. It does not need force.
- 3 At the end unplug the knife and wipe clean while it is still warm.

Uncapping Notes

To remove the capping use either an upward or downward motion with the knife in contact with both sides of the frame. This avoids digging into the capping. Use a fork or similar to uncap missed cells.

Be aware of the hot knife on your hands especially. Some people uncap from the top down to half way then use the other side of the knife to come from the bottom up. Do not rush the task, a cross saw method also helps at times.

When one side of a frame is uncapped spin it over on the nail board and repeat, wait about 30sec for the knife to reheat before starting this side. Set the knife down on the wooden plate while not in use.

The pointed end of the knife can be used to get into difficult cells.

As uncapping is messy have a bucket of warm water and plenty of cloths available to wipe the knife handle and as well as any small spills. The knife should not be used to hit objects with the blade as this reduces its sharpness and cutting ability.

Care Notes

To avoid the knife "caramelising" turn it OFF if not being used in next few minutes, then ON again when next being used and wait for it to warm up.

Clean the knife after use, do this while the knife is warmish with a damp cloth

Ensure youngsters are not using the knife and that you supervise all activity. Do not immerse the knife in water.

When using the nail board ensure the honey frame is in contact with the nail and also one other point to have stability and hold at the top with your non knife hand.

Return all extractor equipment to the NSBKA keeper of that equipment, thanks